Wood Screen Door Tips & Information

FEATURE

Mortise & Tenon Construction —

Our doors are manufactured using a technique similar to the way cabinetry is made. Mortise and Tenon construction prevents sagging and ensures your door will withstand daily use.

TIP

Paint & Seal

Painting or sealing all edges and surfaces of your wood door is required. Choose your favorite finish or color and protect your door for years to come.

FEATURE

Removable Screen Frame & — Simple Rescreening

The removable screen makes painting or repairing your screen door hassle-free. Simply unscrew the screen frames then gently pry them off using a flathead screwdriver or putty knife, being careful not to damage the door. To replace the screen use .155 - .160 spline and fiberglass screen.

TIP

Install a Door Sweep

A door sweep (sold seperately) covers the gap between the bottom of your door and floor to keep bugs from sneaking through.



Install a Door Closer or Catch

There are several products you can buy seperately to control the movement of your door.

Pneumatic Door Closer

Enables smooth closing movement and can hold the door open in various positions.

Mounts to the top or bottom rail of your door.

Spring-Loaded Screen Door Catch

Catches the door as it closes and keeps the door in the closed position.

TIP

Add a Turnbuckle

Install a turnbuckle at the bottom of your door to add strength, dimensional stability and extend the life of your door.

ΠP

Buy Replacement Parts Online

If you need to replace any part of your door, simply visit **ScreenTight.com**.

Free of charge, with proof of purchase, during the first year of ownership, Screen Tight at its discretion will supply parts for repair or replace any door determined to have a manufacturing defect.

This warranty does not cover screen, hardware or misapplication of product.

To activate your warranty, register your purchase at ScreenTight.com/Register