


Measurements:

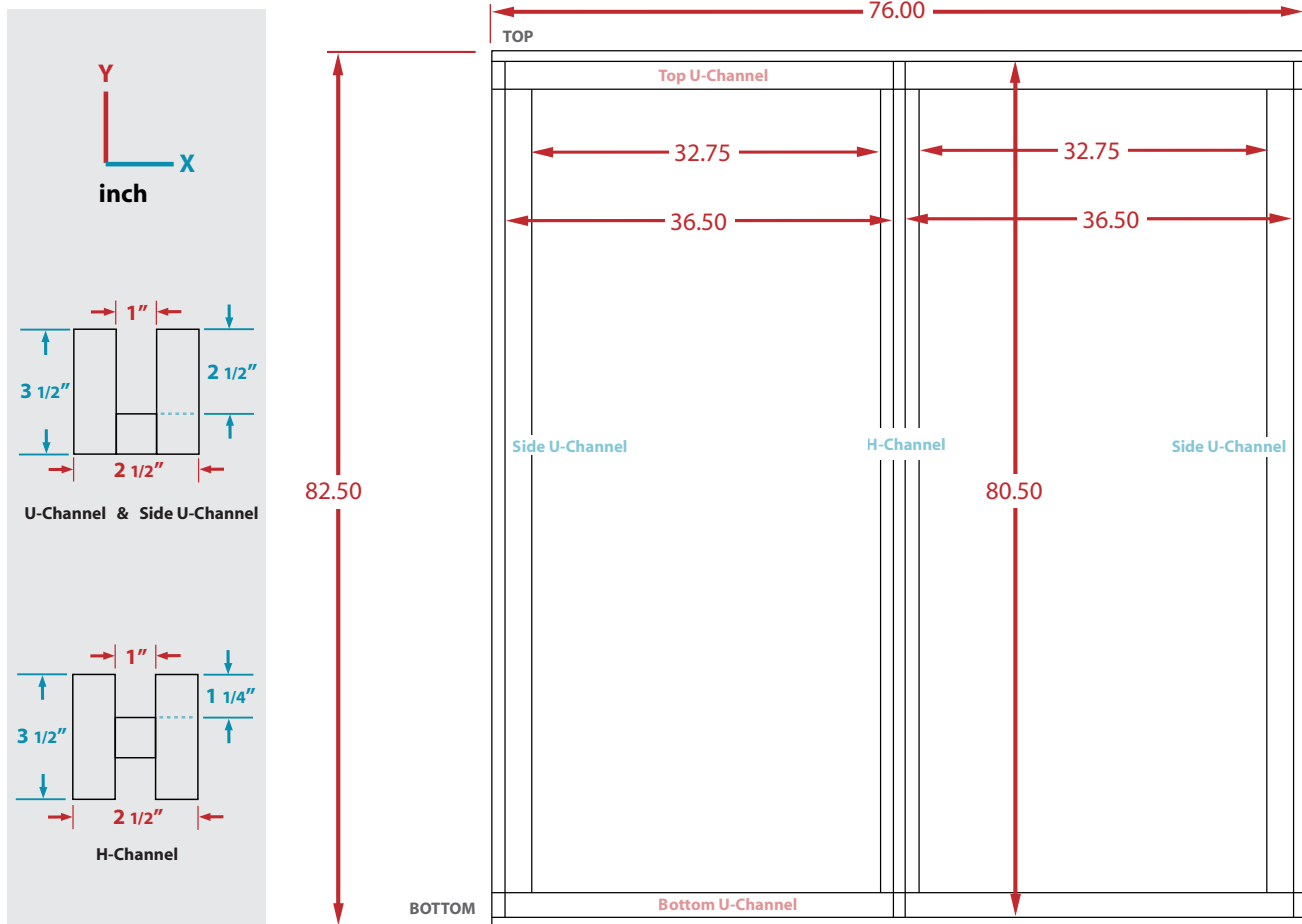

Installation Steps:

Step 1 -

Remove the Covers from the Top and Bottom U-Channels first, then continue with the Side U-Channels on both sides and the H-Channel in the center - Removing all 5 side covers from the Door Panel Enclosure frame.

Step 2 -

Using the provided fasteners, attach the top and bottom U-Channels to your existing porch framework.

Step 3 -

Insert both Side U-Channel pieces into the grooves on both ends of the U-Channels you just installed to the existing porch framework, and fasten with the provided screws.

Step 4 -

Next, insert the H-Channel in the center of the Top and Bottom U-Channels inbetween the Side U-Channels. Hold in place while also inserting both Solid Vinyl Screen Doors on both sides of that H-Channel. Adjust for proper fit.

Step 5 -

Reattach the Covers back onto all of the Door Panel Enclosure pieces which were removed in Step 1. This will enclose the H-Channel and the Solid Vinyl Screen Doors after you finish fastening all screws back into the frames pre-drilled holes.