





Molding Instructions

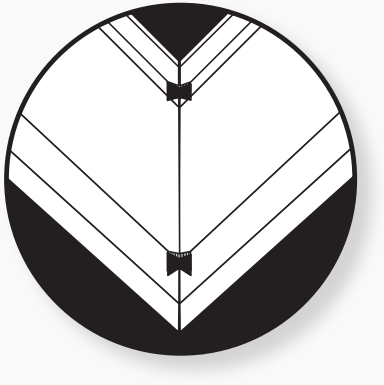


1

All Royal Wood Wrap n Snap moldings are pre mitered with slots cut for dovetail connectors. The dovetail connectors slide easily into the pre-cut slots and securely hold the corners together.

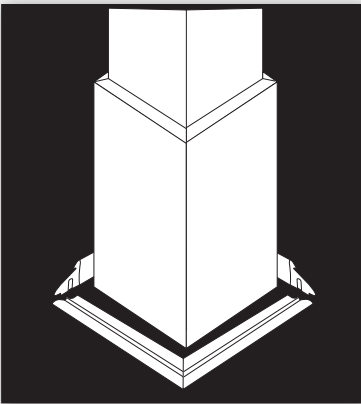

2

To install the molding around the column, join the four corners using a dovetail at each corner with a small amount of PVC adhesive. Attach the molding in the desired location on the column.

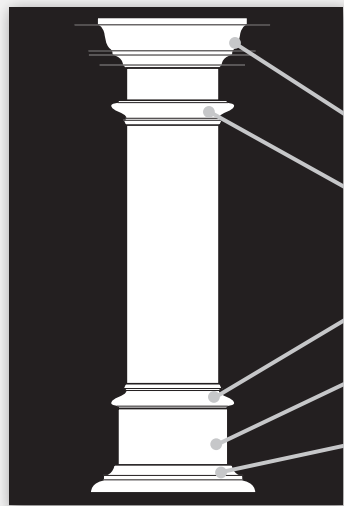

3

The Wrap n Snap moldings are available in the Base Molding, the Bead Molding and the Crown Molding. The Bead Molding, XL is long enough to fit around the Wrap n Snap Base / Cap.

Crown Molding

Base Molding

WnS Base/Cap

Bead Molding, XL