

### Before we get started:

The Screen Tight™ Windbreaker Panel may be affixed to either the interior or exterior of your screen door.

#### A) Affixing to the interior:

- Provides the Windbreaker Panels protection against the elements without being visible from the outside.
- Will be visible from the inside of your door.




#### Step 1 -

Line the Windbreaker Panel frame up with where the screen section begins at the top of your screen door.



#### Step 3 -

Now drill in the provided screws into the bottom of the Windbreaker Panel frame (bottom 3 holes and sides).

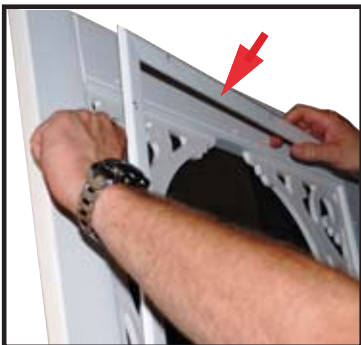

#### Step 5 -

**Bend Back**



**Insert Acrylic Panel**

Now, remove the top section screws that you have temporarily fastened the Windbreaker Panel frame into your door with, gently bend back. (not too far as to compromise the frames structure) then slide in the provided Acrylic Panel between the aluminum frame and your screen door.

**\*Make sure that you use caution while handling the Acrylic Panel so that you do not create any unwanted scratching.**

#### B) Affixing to the exterior:

- Provides the Windbreaker Panels protection against the elements but will be visible from the outside.
- Keeps dust and sediment from depositing on your screen.



#### Step 2 -

Temporarily screw in the top of the Windbreaker Panel frame (top 3 center holes and sides) after lining it up correctly to insure its in the right place before drilling holes into your door.



#### Step 4 -

Remove the protective film from both sides of the Acrylic Panel.



#### Step 6 -

After you make sure that the Acrylic Panel is adjusted properly behind the frame and in front of your screen door, re-install the top fasteners and continue to screw in the Windbreaker Panel frame to your screen door until you have completed filling all of the provided predrilled holes with the fasteners.

**\* Make sure you use a proper acrylic cleanser to clean your new Windbreaker Panel.**