



# SLIDING SCREEN DOOR INSTALLATION GUIDE


If you have the right sized door for your opening, installing a replacement sliding screen door is quick and easy.



## TOOLS & SUPPLIES



Tape Measure

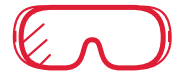

Safety Goggles




Level



Phillips Head  
Screwdriver

### 1 Measure Opening Height & Width

It's extremely important to accurately measure your existing door opening at multiple points. Be sure to measure from inside the track. Use the guide below to note your dimensions. Use a level to note height changes as well.

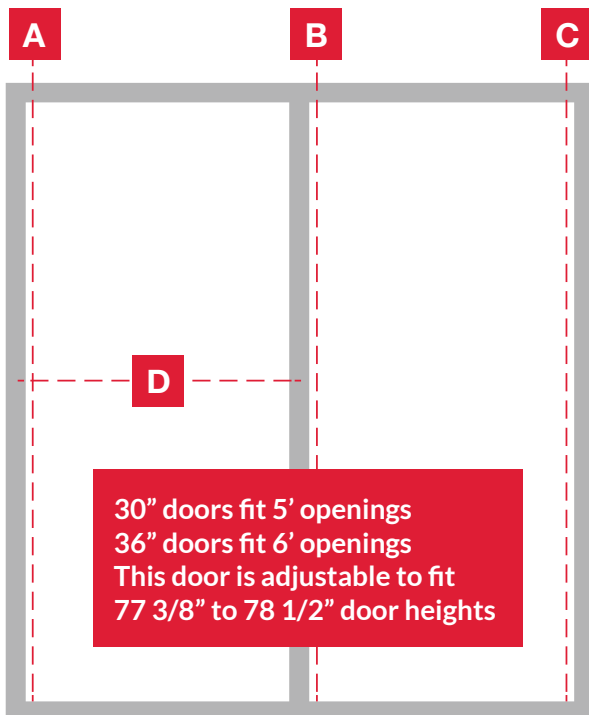

### 2 Confirm the orientation of the door.

The handle should be lockable from the inside only and the handle to open the door should be on the same sides as the glass door. You can simply flip the door for a left or right side opening.

### 3 Insert Door & Adjust to Fit

Slide the door in the top track first and then insert the bottom. Adjust the brass rollers on the bottom first through the side of the channel with a Phillips head screwdriver on each side of the door. Repeat this adjustment on each of the screws to increase the height and engage the door into the track.



#### ! EXTENDED HEIGHT

If you need to extend the height of your door please email us at [customers@screentight.com](mailto:customers@screentight.com) and we can help.

### 4 Attach Latch & Handle

Lift the lock handle on the door to the up position. Place the latch lock plate in alignment with the door latch and attach with two small Phillips head screws.

